


### 5508 Two Bushing Combination Graph

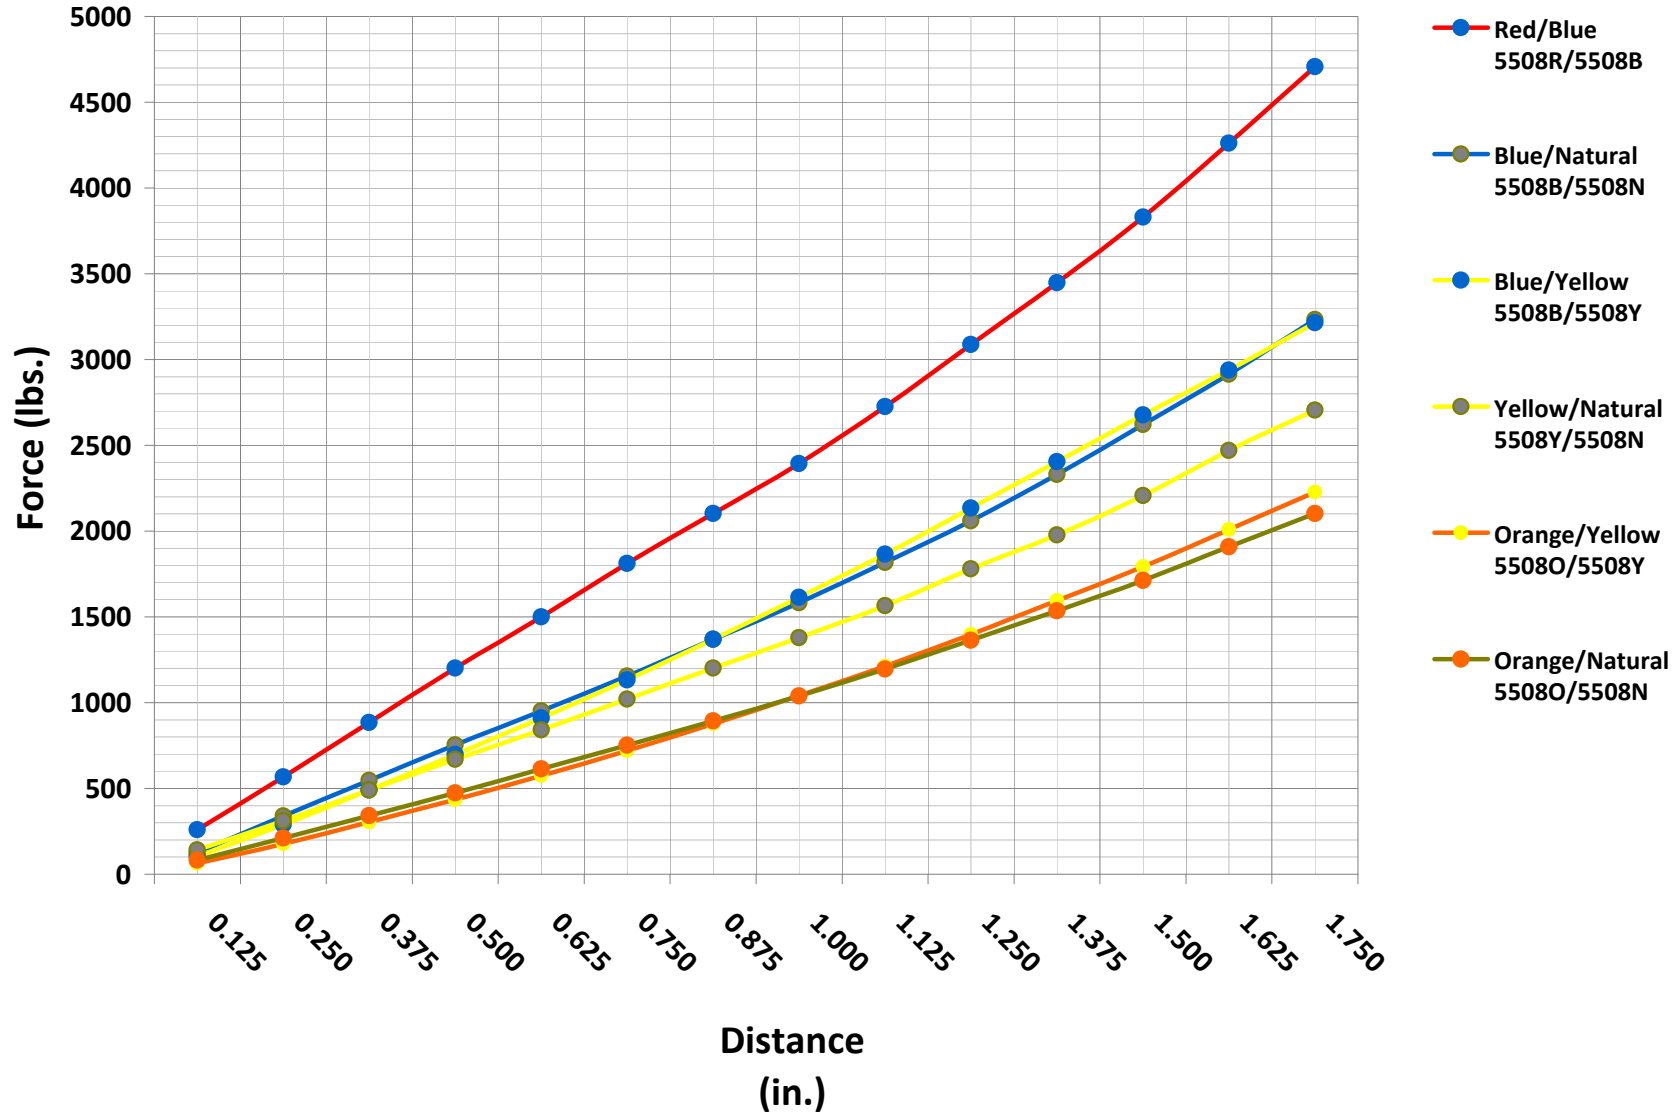

## 5508 Two Bushing Combination Numbers

	0.125	0.250	0.375	0.500	0.625	0.750	0.875	1.000	1.125	1.250	1.375	1.500	1.625	1.750
<b>Red/Blue</b> 5508R/5508B	259	567	885	1202	1500	1812	2103	2393	2725	3088	3447	3830	4262	4708
<b>Blue/Natural</b> 5508B/5508N	125	339	547	753	952	1154	1369	1582	1818	2060	2331	2621	2915	3233
<b>Blue/Yellow</b> 5508B/5508Y	105	289	490	697	911	1133	1370	1613	1865	2135	2405	2678	2939	3215
<b>Yellow/Natural</b> 5508Y/5508N	141	312	490	669	842	1021	1202	1379	1565	1780	1977	2207	2470	2705
<b>Orange/Yellow</b> 5508O/5508Y	64	178	305	435	575	721	877	1041	1213	1397	1595	1792	2009	2227
<b>Orange/Natural</b> 5508O/5508N	83	210	341	473	613	752	894	1040	1196	1364	1535	1712	1908	2103